

POWER UNIT

CONTENTS

RING GEAR COVER AND AIR INTAKE SILENCER CASE	6- 2
REMOVAL	6- 2
INSTALLATION	6- 2
INTAKE MANIFOLD ASSEMBLY	6- 3
REMOVAL	6- 3
INSTALLATION	6- 5
DISASSEMBLY	6- 8
REASSEMBLY	6- 9
CYLINDER HEAD COVER	6-11
REMOVAL	6-11
INSTALLATION	6-13
POWER UNIT	6-15
REMOVAL	6-15
INSTALLATION	6-21
OIL PUMP	6-26
REMOVAL	6-26
DISASSEMBLY	6-27
INSPECTION	6-28
MEASURING PUMP COMPONENTS	6-28
ASSEMBLY	6-29
INSTALLATION	6-30
TIMING CHAIN/BALANCER CHAIN (VVT model)	6-31
REMOVAL	6-31
INSPECTION	6-35
INSTALLATION	6-37
TIMING CHAIN/BALANCER CHAIN (Non-VVT model)	6-44
REMOVAL	6-44
INSPECTION	6-48
INSTALLATION	6-50
CYLINDER HEAD ASSEMBLY	6-57
REMOVAL	6-57
ASSEMBLY	6-58
DISASSEMBLY	6-62
INSPECTION/SERVICING	6-63
REASSEMBLY	6-73
COUNTER-BALANCER MECHANISM	6-75
REMOVAL	6-75
DISASSEMBLY	6-76
INSPECTION	6-77
ASSEMBLY	6-78
INSTALLATION	6-81
CYLINDER/CRANKSHAFT/PISTON	6-82
DISASSEMBLY	6-82
INSPECTION/SERVICING	6-85
REASSEMBLY	6-97
THERMOSTAT	6-105
REMOVAL	6-105
INSPECTION	6-105
INSTALLATION	6-106
OPERATION	6-107
WATER COOLING SYSTEM	6-107
ENGINE LUBRICATION SYSTEM	6-108