

LOWER UNIT [Standard rotation (Right-hand) model]

CONTENTS

| | |
|--------------------------------------------------------|-------------|
| REMOVAL & DISASSEMBLY | 9- 2 |
| INSPECTION | 9- 8 |
| PROPELLER | 9- 8 |
| GEARCASE | 9- 8 |
| GEARS/BEARING | 9- 8 |
| FORWARD GEAR BEARING HOUSING | 9- 9 |
| PROPELLER SHAFT COMPONENTS | 9- 9 |
| PROPELLER SHAFT BEARING HOUSING | 9-10 |
| SHIFT ROD GUIDE HOUSING COMPONENTS | 9-11 |
| WATER PUMP AND RELATED ITEMS | 9-11 |
| DRIVESHAFT OIL SEAL HOUSING | 9-12 |
| DRIVESHAFT | 9-12 |
| ASSEMBLY & INSTALLATION | 9-13 |
| TRIM TAB | 9-25 |
| LOWER UNIT GEARS- SHIMMING AND ADJUSTMENT | 9-26 |