

POWER UNIT

CONTENTS

RING GEAR COVER AND AIR INTAKE SILENCER CASE	6- 2
REMOVAL	6- 2
INSTALLATION	6- 2
COLLECTOR ASSEMBLY (For multi-stage induction model)	6- 3
REMOVAL	6- 3
SYSTEM INSPECTION	6- 4
INSTALLATION	6- 5
COLLECTOR ASSEMBLY (For single-stage induction model)	6- 6
REMOVAL	6- 6
INSTALLATION	6- 7
CYLINDER HEAD COVER	6- 8
REMOVAL	6- 8
INSTALLATION	6-10
POWER UNIT	6-12
REMOVAL	6-12
INSTALLATION	6-18
OIL PUMP	6-23
REMOVAL	6-23
DISASSEMBLY	6-24
INSPECTION	6-25
MEASURING PUMP COMPONENTS	6-25
ASSEMBLY	6-26
INSTALLATION	6-27
TIMING CHAIN (VVT model)	6-28
REMOVAL	6-28
INSPECTION	6-32
INSTALLATION	6-34
TIMING CHAIN (Non-VVT model)	6-41
REMOVAL	6-41
INSPECTION	6-45
INSTALLATION	6-47
CYLINDER HEAD ASSEMBLY	6-54
REMOVAL	6-54
ASSEMBLY	6-56
DISASSEMBLY	6-61
INSPECTION/SERVICING	6-62
REASSEMBLY	6-72
CYLINDER/CRANKSHAFT/PISTON	6-74
DISASSEMBLY	6-74
INSPECTION/SERVICING	6-77
REASSEMBLY	6-89
THERMOSTAT	6-96
REMOVAL	6-96
INSPECTION	6-96
INSTALLATION	6-97
OPERATION	6-98
ENGINE LUBRICATION SYSTEM	6-98
WATER COOLING SYSTEM	6-100
PCV SYSTEM	6-101