

YAMAHA

Marine

Outboards

**150A, 150F,
L150F, D150H,
175D, 200F,
L200F, 200G,
225D**

**SERVICE
MANUAL**

64C-28197-Z8-11

PREFACE

This manual has been prepared by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their trained mechanics when performing maintenance procedures and repairs to Yamaha equipment. It has been written to suit the needs of persons who have a basic understanding of the mechanical and electrical concepts and procedures inherent in the work, for without such knowledge attempted repairs or service to the equipment could render it unsafe or unfit for use.

Because the Yamaha Motor Company, Ltd. has a policy of continuously improving its products, models may differ in detail from the descriptions and illustrations given in this publication. Use only the latest edition of this manual. Authorized Yamaha dealers are notified periodically of modifications and significant changes in specifications and procedures, and these are incorporated in successive editions of this manual.

**150A, 150F, L150F, D150H, 175D,
200F, L200F, 200G, 225D**

SERVICE MANUAL

©1998 Yamaha Motor Co., Ltd.

1st Edition, October 1998

All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means including photocopying and recording without the written permission of the copyright holder.

Such written permission must also be obtained before any part of this publication is stored in a retrieval system of any nature.

HOW TO USE THIS MANUAL

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspection operations.

For instance, the condition of a faulty component will precede an arrow symbol and the course of action required will follow the symbol.

- Bearings

Pitting/scratches → Replace.

To assist you in finding your way through this manual, the section title and major heading is given at the top of every page.

MODEL INDICATION

Multiple models are mentioned in this manual and their model indications are noted as follows.

Model name	150AET	L150AET	150FETO		L150FETO		150GETO
USA and Canada name	C150TR	—	—	S150TR	—	L150TR	P150TR
Indication	150AET	L150AET	150FETO	S150FETO	L150FETO	LS150FETO	150GETO
Model name	D150HETO	175AET	175DETO		175FETO	200AET	L200AET
USA and Canada name	D150TR	—	—	S175TR	P175TR	—	—
Indication	D150HETO	175AET	175DETO	S175DETO	175FETO	200AET	L200AET
Model name	200FETO		L200FETO		200GETO	225DET	225DETO
USA and Canada name	200TR	S200TR	—	L200TR	P200TR	—	—
Indication	200FETO	S200FETO	L200FETO	LS200FETO	200GETO	225DET	225DETO

ILLUSTRATIONS


The illustrations within this service manual represent all of the designated models.

CROSS REFERENCES

The cross references have been kept to a minimum. Cross references will direct you to the appropriate section or chapter.

IMPORTANT INFORMATION

In this Service Manual particularly important information is distinguished in the following ways.

 The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

WARNING

Failure to follow **WARNING** instructions could result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the outboard motor.

CAUTION:

A **CAUTION** indicates special precautions that must be taken to avoid damage to the outboard motor.

NOTE:








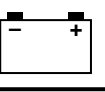
















A **NOTE** provides key information to make procedures easier or clearer.

SPECIFICATIONS

These are given in bold type at each procedure. It is not necessary to leave the section dealing with the procedure in order to look up the specifications.

It is important to note the differences in specifications of models. When a procedure relates to more than one model, the main differences in specifications will be shown in a table similar to the following.

Model name	150AET	L150AET	150FETO		L150FETO		150GETO
USA and Canada name	C150TR	—	—	S150TR	—	L150TR	P150TR
Lubrication system	Pre-mixed	Pre-mixed	Oil injection		Oil injection		Oil injection
Model name	D150HETO	175AET	175DETO		175FETO	200AET	L200AET
USA and Canada name	D150TR	—	—	S175TR	P175TR	—	—
Lubrication system	Oil injection	Pre-mixed	Oil injection		Oil injection	Pre-mixed	Pre-mixed
Model name	200FETO		L200FETO		200GETO	225DET	225DETO
USA and Canada name	200TR	S200TR	—	L200TR	P200TR	—	—
Lubrication system	Oil injection		Oil injection		Oil injection	Pre-mixed	Oil injection

① GEN INFO 	② SPEC 
③ INSP ADJ 	④ FUEL 
⑤ POWR 	⑥ LOWR 
⑦ BRKT 	⑧ ELEC 
⑨ TRBL ANLS 	⑩ 
⑪ 	⑫ 
⑬ 	⑭ 
⑮ 	⑯ 
⑰ 	⑱ 
⑲ 	⑳ 
㉑  271	㉒  242
㉓  572	㉔  SS

SYMBOLS

Symbols ① to ⑨ are designed as thumb-tabs to indicate the content of a chapter.

- ① General information
- ② Specifications
- ③ Periodic inspections and adjustments
- ④ Fuel system
- ⑤ Power unit
- ⑥ Lower unit
- ⑦ Bracket unit
- ⑧ Electrical systems
- ⑨ Trouble analysis

Symbols ⑩ to ⑮ indicate specific data.

- ⑩ Special tool
- ⑪ Specified liquid
- ⑫ Specified engine speed
- ⑬ Specified torque
- ⑭ Specified measurement
- ⑮ Specified electrical value
[Resistance (Ω), Voltage (V), Electric current (A)]








 

Symbol ⑯ to ⑱ in an exploded diagram indicate the grade of lubricant and the location of the lubrication point.

- ⑯ Apply Yamaha 2-stroke outboard motor oil (TC-W3)
- ⑰ Apply water resistant grease (Yamaha grease A, Yamaha marine grease)
- ⑱ Apply molybdenum disulfide oil

Symbols ⑲ to ㉔ in an exploded diagram indicate the grade of the sealing or locking agent and the location of the application point.

- ⑲ Apply Gasket Maker®
- ⑳ Apply Yamabond #4 (Yamaha bond number 4)
- ㉑ Apply LOCTITE® No. 271 (Red LOCTITE)
- ㉒ Apply LOCTITE® No. 242 (Blue LOCTITE)
- ㉓ Apply LOCTITE® No. 572
- ㉔ Apply silicon sealant



CONTENTS

GENERAL INFORMATION	 GEN INFO	1
SPECIFICATIONS	 SPEC	2
PERIODIC INSPECTIONS AND ADJUSTMENTS	 INSP ADJ	3
FUEL SYSTEM	 FUEL	4
POWER UNIT	 POWR	5
LOWER UNIT	 LOWR	6
BRACKET UNIT	 BRKT	7
ELECTRICAL SYSTEMS	 ELEC	8
TROUBLE ANALYSIS	 TRBL ANLS	9

CHAPTER 1 GENERAL INFORMATION



IDENTIFICATION	1-1
SERIAL NUMBER	1-1
STARTING SERIAL NUMBERS	1-1
SAFETY WHILE WORKING	1-2
FIRE PREVENTION	1-2
VENTILATION.....	1-2
SELF-PROTECTION.....	1-2
OILS, GREASES AND SEALING FLUIDS.....	1-2
GOOD WORKING PRACTICES	1-3
DISASSEMBLY AND ASSEMBLY	1-4
SPECIAL TOOLS	1-5
MEASURING	1-5
REMOVING AND INSTALLING	1-7

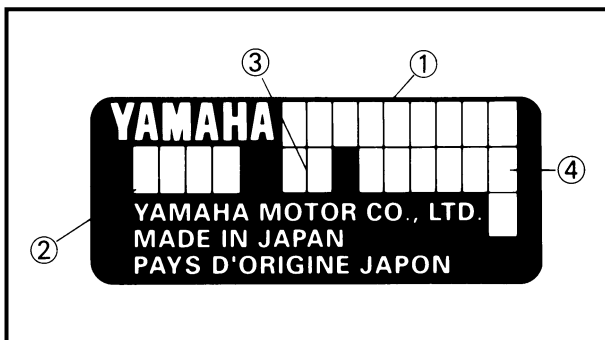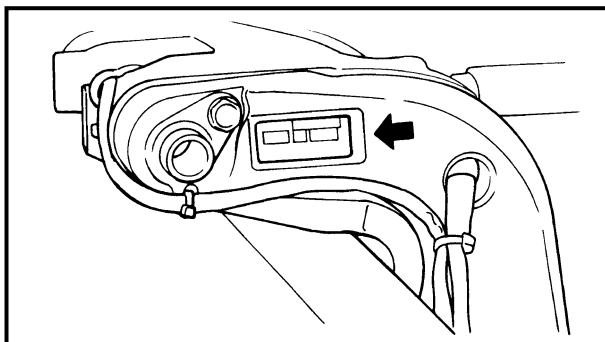

**IDENTIFICATION
SERIAL NUMBER**

The outboard motor's serial number is stamped on a label which is attached to the port clamp bracket.

NOTE: _____

As an antitheft measure, a special label on which the outboard motor's serial number is stamped is bonded to the port clamp bracket. The label is specially treated so that peeling it off causes cracks across the serial number.

- ① Model name
- ② Approval model code
- ③ Transom height
- ④ Serial number

STARTING SERIAL NUMBERS

The starting serial number blocks are as follows:

Model name			Approval model code	Starting serial number	Model name			Approval model code	Starting serial number
World-wide	USA	Canada			World-wide	USA	Canada		
150AET	C150TR	—	6G4	L: 305521 - X: 704396 -	175FETO	P175TR		62H	L: 500647 -
L150AET	—		6K0	X: 750347 -	200AET	—		6G6	L: 308781 - X: 707018 -
150FETO	—		6G4	L: 352137 -	L200AET	—		6K1	X: 752202 -
	S150TR			X: 504118 -	200FETO	200TR	—	6G6	L: 350991 -
L150FETO	—		6K0	L: 350142 -	S200TR				X: 506004 -
	L150TR	—		X: 501152 -	L200FETO	—		6K1	L: 350141 -
150GETO	P150TR		6J9	L: 502379 -	200GETO	L200TR	—		X: 501625 -
D150HETO	D150TR	—		L: 601301 -	P200TR			61H	L: 502516 -
175AET	—		6G5	L: 302440 -	225DET	—		6K7	L: 400393 -
	—			X: 701017 -	225DETO	—			X: 500160 -
175DETO	S175TR	—		L: 350273 -					L: 450255 -
				X: 501252 -					X: 550266 -