



**SUZUKI**

**OUTBOARD  
WORKSHOP  
SERVICE MANUAL**

**ALL MOTORS  
2 TO 225 HP**

**YEARS  
1988 TO 2003**

# CONTENTS

---

## 1

### GENERAL INFORMATION AND BOATING SAFETY

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
SAFETY IN SERVICE	1-12

## 2

### TOOLS AND EQUIPMENT

TOOLS AND EQUIPMENT	2-2
TOOLS	2-5
FASTENERS, MEASUREMENTS AND CONVERSIONS	2-14

## 3

### MAINTENANCE

ENGINE MAINTENANCE	3-2
BOAT MAINTENANCE	3-8
TUNE-UP	3-12
WINTER STORAGE CHECKLIST	3-35
SPRING COMMISSIONING CHECKLIST	3-35

## 4

### FUEL SYSTEM

FUEL AND COMBUSTION	4-2
FUEL SYSTEM	4-3
TROUBLESHOOTING	4-7
CARBURETOR SERVICE	4-11
REED VALVE SERVICE	4-25
FUEL PUMP SERVICE	4-27
ELECTRONIC FUEL INJECTION	4-32

## 5

### IGNITION AND ELECTRICAL SYSTEMS

UNDERSTANDING AND TROUBLESHOOTING	
ELECTRICAL SYSTEMS	5-2
BREAKER POINTS IGNITION (MAGNETO IGNITION)	5-7
CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM	5-11
ELECTRONIC IGNITION	5-38
CHARGING CIRCUIT	5-39
STARTING CIRCUIT	5-45
IGNITION AND ELECTRICAL WIRING DIAGRAMS	5-52

## 6

### OIL INJECTION

OIL INJECTION SYSTEM	6-2
COOLING SYSTEM	6-11
OIL INJECTION WARNING SYSTEMS	6-14
OVERHEAT WARNING SYSTEM	6-17

# CONTENTS

ENGINE MECHANICAL POWERHEAD RECONDITIONING	7-2 7-32	<b>POWERHEAD</b>	<b>7</b>
LOWER UNIT LOWER UNIT OVERHAUL JET DRIVE	8-2 8-6 8-51	<b>LOWER UNIT</b>	<b>8</b>
MANUAL TILT GAS ASSISTED TILT POWER TILT POWER TRIM/TILT	9-2 9-2 9-3 9-6	<b>TRIM AND TILT</b>	<b>9</b>
REMOTE CONTROL BOX TILLER HANDLE	10-2 10-7	<b>REMOTE CONTROL</b>	<b>10</b>
HAND REWIND STARTER OVERHEAD TYPE STARTER BENDIX TYPE STARTER	11-2 11-2 11-10	<b>HAND REWIND STARTER</b>	<b>11</b>
GLOSSARY	11-13	<b>GLOSSARY</b>	
INDEX	11-17	<b>MASTER INDEX</b>	
SUPPLEMENT: DT5Y AND ADDITIONAL INFORMATION ON MOST OTHER MODELS, INCLUDING UPDATED CARBURETOR AND IGNITION SPECIFICATIONS	12-2	<b>SUPPLEMENT</b>	