

LOWER UNIT [*Standard rotation (Right-hand) model*]

CONTENTS

REMOVAL & DISASSEMBLY	9- 2
INSPECTION	9- 8
PROPELLER	9- 8
GEARCASE	9- 8
GEARS/BEARING	9- 8
FORWARD GEAR BEARING HOUSING	9- 9
PROPELLER SHAFT COMPONENTS	9- 9
PROPELLER SHAFT BEARING HOUSING	9-10
SHIFT ROD GUIDE HOUSING COMPONENTS	9-11
WATER PUMP AND RELATED ITEMS	9-11
DRIVESHAFT OIL SEAL HOUSING	9-12
DRIVESHAFT	9-12
ASSEMBLY & INSTALLATION	9-13
TRIM TAB	9-25
LOWER UNIT GEARS- SHIMMING AND ADJUSTMENT	9-26