

YANMAR®

M2215-04E150

YANMAR®

SERVICE MANUAL

MARINE DIESEL ENGINE

6LY3-ETP/-STP/-UTP

YANMAR CO.,LTD.

Publication No.	M2215-04E150
-----------------	--------------

History of Revision					
---------------------	--	--	--	--	--

Manual Name	Service Manual for Marine Diesel Engine				
-------------	---	--	--	--	--

Engine Model:	6LY3-ETP/-STP/-UTP				
---------------	--------------------	--	--	--	--

Number of revision	Date of revision	Reason for correction	Outline of correction	Correction item No (page)	Corrected by
--------------------	------------------	-----------------------	-----------------------	---------------------------	--------------

New edition: November 2005					
----------------------------	--	--	--	--	--

FOREWORD

This service manual has been compiled for engineers engaged in sales, service, inspection and maintenance. Accordingly, descriptions of the construction and functions of the engine are emphasized in this manual, while items, which should already be common knowledge, are omitted.

One characteristic of a marine diesel engine is that its performance in a vessel is governed by the applicability of the vessel's hull construction and its steering system.

Engine installation, fitting out and propeller selection have a substantial effect on the performance of the engine and the vessel. Moreover, when the engine runs unevenly or when trouble occurs, it is essential to check a wide range of operating conditions - such as installation to the full and suitability of the ship's piping and propeller - and not just the engine itself. To get maximum performance from this engine, you should completely understand its functions, construction and capabilities, as well as proper use and servicing.

Use this manual as a handy reference in daily inspection and maintenance, and as a text for engineering guidance.

©2005 YANMAR CO., LTD

All rights reserved. This manual may not be reproduced or copied, in whole or in part, without the written permission of YANMAR CO., LTD.

CONTENTS

1. General	1
1.1 Exterior views	1
1.2 Main specifications	2
1.3 Fuel oil, lubricating oil and cooling water	3
1.3.1 Fuel oil	3
1.3.2 Lubricating oil	5
1.3.3 Cooling water	7
1.4 Engine outline	8
1.5 Piping diagrams	10
1.6 Exhaust gas emission regulation	11
1.6.1 Engine identification	11
1.6.2 EPA exhaust gas emission standard	12
1.6.3 EPA guarantee conditions for emission standard	13
2. Inspection and adjustment	14
2.1 Periodic maintenance schedule	14
2.2 Periodic inspection and maintenance procedure	16
2.2.1 Check before starting	16
2.2.2 Inspection after initial 50 hours or one month operation	20
2.2.3 Inspection every 50 hours or monthly	22
2.2.4 Inspection on initial 250 hours or one year	27
2.2.5 Inspection every 250 hours or one year	33
2.2.6 Inspection every year	39
2.2.7 Inspection every 500 hours or two years	41
2.2.8 Inspection 2,000 hours or every two years	42
2.2.9 Inspection every 1,000 hours or four years	43
2.2.10 Inspection every 2000 hours or eight years	45
2.3 Adjusting the no-load minimum speed	49
2.4 Thermostat inspection	50
2.5 Test running	51
2.5.1 Preliminary precautions	51
2.5.2 Test running procedure	51
2.5.3 Check points and precautions during running	52
2.6 Long storage	53

3. Troubleshooting	54
3.1 Preparation before troubleshooting	54
3.2 Quick reference chart for troubleshooting	55
3.3 Trouble code	64
4. Disassembly and reassembly	65
4.1 Disassembly and reassembly precautions	65
4.2 Disassembly and reassembly tools	66
4.2.1 General hand tools	66
4.2.2 Special hand tools	68
4.2.3 Measuring instruments	71
4.2.4 Other material.....	75
4.3 Disassembly and reassembly	77
4.3.1 Disassembly	77
4.3.2 Reassembly.....	83
5. Inspection and servicing of basic engine parts	103
5.1 Cylinder block	103
5.1.1 Inspection of parts	103
5.1.2 Cleaning of oil holes	103
5.1.3 Color check procedure	104
5.1.4 Replacement of plugs.....	105
5.1.5 Cylinder bore measurement	106
5.2 Cylinder head	107
5.2.1 Inspecting the cylinder head.....	108
5.2.2 Valve seat correction procedure.....	109
5.2.3 Intake/exhaust valves, valve guides	111
5.2.4 Valve springs.....	114
5.2.5 Nozzle sleeve	116
5.2.6 Assembling the cylinder head	117
5.2.7 Measuring top clearance	118
5.2.8 Intake and exhaust rocker arms	119
5.2.9 Adjustment of valve clearance	120
5.3 Piston and piston pins	121
5.3.1 Piston	121
5.3.2 Piston pin.....	123
5.3.3 Piston rings.....	124

5.4 Connecting rod	127
5.4.1 Inspecting the connection rod	127
5.4.2 Crank pin metal	129
5.4.3 Piston pin bushing	131
5.4.4 Assembling piston and connecting rod.....	132
5.5 Crankshaft and main bearing	133
5.5.1 Crankshaft	133
5.5.2 Main bearing.....	135
5.6 Camshaft and Tappets	136
5.6.1 Camshaft	136
5.6.2 Tappets	138
5.7 Timing gear	140
5.7.1 Inspecting the gears	140
5.7.2 Gear timing marks	141
5.8 Flywheel and housing	142
5.8.1 Specifications of flywheel	142
5.8.2 Ring gear.....	143
5.8.3 Position of top dead center.....	143
6. Fuel injection equipment	144
6.1 Fuel Injection pump/governor/timer	144
6.1.1 Fuel system diagram	144
6.1.2 Fuel injection pump specifications.....	145
6.1.3 Removing a fuel injection pump assy.....	146
6.1.4 Installing a fuel injection pump assy.....	149
6.1.5 Troubleshooting of fuel injection pump.....	157
6.2 Fuel Injection nozzle	159
6.2.1 Functioning of fuel injection nozzle	159
6.3 Fuel feed pump	161
6.3.1 Fuel feed pump specifications.....	162
6.3.2 Fuel feed pump disassembly.....	162
6.3.3 Fuel feed pump inspection	163
6.3.4 Fuel feed pump reassembly	163
6.3.5 Fuel feed pump adjustment	164
6.4 Fuel filter	166
6.4.1 Fuel filter specifications	166

6.4.2 Fuel filter inspection	167
7. Intake and exhaust system	168
7.1 Intake system	168
7.2 Exhaust system	168
7.2.1 Mixing elbow inspection	168
8. Lubrication system	169
8.1 Lubrication system	169
8.2 Lube oil pump	170
8.2.1 Lube oil pump construction	170
8.2.2 Specifications of lube oil pump.....	171
8.2.3 Lube oil pump disassembly and reassembly.....	172
8.2.4 Oil pressure control valve construction	174
8.3 Lube oil filter	175
8.3.1 Lube oil filter construction.....	175
8.3.2 Lube oil filter replacement	175
8.4 Lube oil cooler	176
8.4.1 Lube oil cooler construction.....	176
8.4.2 Inspecting the lube oil cooler.....	176
8.5 Rotary waste oil pump (Optional)	177
9. Cooling water system	178
9.1 Cooling water system	178
9.2 Seawater pump	179
9.2.1 Specifications of seawater pump.....	179
9.2.2 Seawater pump disassembly	180
9.2.3 Seawater pump Inspection.....	180
9.2.4 Seawater pump reassembly.....	181
9.3 Fresh water pump	182
9.3.1 Fresh water pump construction	182
9.3.2 Specifications of fresh water pump	183
9.3.3 Fresh water pump disassembly.....	183
9.3.4 Fresh water pump inspection	184
9.4 Heat exchanger	186
9.4.1 Heat exchanger construction.....	186
9.4.2 Specifications of heat exchanger	186

9.4.3 Disassembly and reassembly.....	186
9.4.4 Heat exchanger inspection.....	187
9.5 Pressure cap and coolant recovery tank	188
9.5.1 Pressure cap construction.....	188
9.5.2 Pressure cap pressure control	188
9.5.3 Pressure cap inspection	189
9.5.4 Function of the coolant recovery tank	189
9.5.5 Specifications of coolant recovery tank.....	189
9.5.6 Mounting the coolant recovery tank	190
9.5.7 Precautions on usage of the coolant recovery tank	190
9.6 Thermostat	191
9.6.1 Functioning of thermostat.....	191
9.6.2 Thermostat construction.....	191
9.6.3 Characteristics of thermostat.....	192
9.6.4 Thermostat inspection	192
9.6.5 Testing the thermostat.....	192
9.7 Seacock (Optional)	193
9.8 Bilge pump and bilge strainer (Optional)	194
9.8.1 Introduction.....	194
9.8.2 Description	195
9.8.3 Cautions	196
9.8.4 Assembly procedure.....	198
9.8.5 Cautions for Assembling	200
9.8.6 Troubleshooting.....	202
10. Turbocharger	203
10.1 Construction and function	204
10.1.1 Outline	204
10.2 Standards for maintenance and check	206
10.2.1 Standards for maintenance and check	206
10.2.2 Tightening torque	207
10.3 Periodical checking procedure	208
10.3.1 Periodical checking interval.....	208
10.3.2 Checking procedure	208
10.4 Disassembly procedure	210
10.4.1 Preparations for disassembly.....	210


10.4.2 Check before disassembly	212
10.4.3 Disassembly	213
10.5 Cleaning and checking procedure	215
10.5.1 Cleaning	215
10.5.2 Checking procedure	217
10.6 Reassembling procedure	220
10.6.1 Preparations for reassembly	220
10.6.2 Reassembling procedure	220
10.7 Handling after reassembly	223
10.7.1 Precautions for mounting the turbocharger to the engine	223
10.8 Troubleshooting	224
10.8.1 Exhaust gas is dense	224
10.8.2 Whitish exhaust gas	224
10.8.3 Too early oil shortage	225
10.8.4 Output drop	225
10.8.5 Poor follow-up of supercharger	225
10.8.6 Unusual sound or vibration.....	225
11. Reduction and reversing gear	226
12. Remote control	227
12.1 Electronic control system (ECS)	227
12.1.1 Digital display	228
12.1.2 Rocker switch panel	230
12.1.3 Control head (Shift & Throttle).....	231
13. Electrical system	232
13.1 Electrical system	232
13.1.1 Wiring diagram	232
13.2 Battery	233
13.2.1 Construction	233
13.2.2 Battery capacity and battery cables	234
13.2.3 Inspection	235
13.2.4 Charging	237
13.2.5 Battery storage precautions	238
13.3 Starting Motor	239
13.3.1 Specifications	239

13.3.2 Characteristics.....	239
13.3.3 Structure.....	240
13.3.4 Wiring diameter of a starting motor	242
13.4 Alternator standard, 12V/80A	243
13.4.1 Specifications	243
13.4.2 Structure.....	244
13.4.3 Wiring diagram	245
13.4.4 Standard output characteristics.....	246
13.4.5 Inspection	247
13.5 Warning devices	248
13.5.1 Sensor installation position.....	248
13.5.2 Lube oil pressure sensor and boost sensor	250
13.5.3 Temperature sensor for water, lube oil and fuel.....	251
14. Service standards	252
14.1 Engine tuning	252
14.2 Engine body	253
14.2.1 Cylinder head	253
14.2.2 Camshaft and gear train.....	254
14.2.3 Cylinder block.....	255
15. Tightening torque for bolts and nuts	258
15.1 Main bolt and nut	258
15.2 Standard bolts and nuts (without lube oil)	259

FOR SAFETY

1. SAFETY LABELS

- Most accidents are caused by negligence of basic safety rules and precautions. For accident prevention, it is important to avoid such causes before development to accidents.
Please read this manual carefully before starting repair or maintenance to fully understand safety precautions and appropriate inspection and maintenance procedures.
Attempting at a repair or maintenance job without sufficient knowledge may cause an unexpected accident.

- It is impossible to cover every possible danger in repair or maintenance in the manual. Sufficient consideration for safety is required in addition to the matters marked  . Especially for safety precautions in a repair or maintenance job not described in this manual, receive instructions from a knowledgeable leader.

- Safety marks used in this manual and their meanings are as follows:



DANGER-indicates an imminent hazardous situation which, if not avoided, WILL result in death or serious injury.



WARNING-indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.



CAUTION-indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

- **NOTICE** - indicates that if not observed, the product performance or quality may not be guaranteed.

2. Safety Precautions

(1) SERVICE AREA

WARNING



- **Sufficient Ventilation**

Inhalation of exhaust fumes and dust particles may be hazardous to one's health. Running engines, welding, sanding, painting, and polishing tasks should be only done in well ventilated areas.

CAUTION

- **Safe / Adequate Work Area**

The service area should be clean, spacious, level and free from holes in the floor, to prevent "slip" or "trip and fall" type accidents.

CAUTION

- **Clean, orderly arranged place**

No dust, mud, oil or parts should be left on the floor surface.
[Failure to Observe]
An unexpected accident may be caused.

CAUTION



- **Bright, Safely Illuminated Area**

The work area should be well lit or illuminated in a safe manner. For work in enclosed or dark areas, a "drop cord" should be utilized. The drop cord must have a wire cage to prevent bulb breakage and possible ignition of flammable substances.

CAUTION



- **Safety Equipment**

Fire extinguisher(s), first aid kit and eye wash / shower station should be close at hand (or easily accessible) in case of an emergency.

(2) WORK - WEAR (GARMENTS)

CAUTION



• Safe Work Clothing

Appropriate safety wear (gloves, special shoes/boots, eye/ear protection, head gear, harness, clothing, etc.) should be used/worn to match the task at hand. Avoid wearing jewelry, unbuttoned cuffs, ties or loose fitting clothes around moving machinery. A serious accident may occur if caught in moving/rotating machinery.

(3) TOOLS

WARNING


• Appropriate Lifting / Holding

When lifting an engine, use only a lifting device (crane, jack, etc.) with sufficient lifting capacity. Do not overload the device. Use only a chain, cable, or lifting strap as an attaching device. Do not use rope, serious injury may result.

To hold or support an engine, secure the engine to a support stand, test bed or test cart designed to carry the weight of the engine. Do not overload this device, serious injury may result.

Never run an engine without being properly secured to an engine support stand, test bed or test cart, serious injury may result.

WARNING

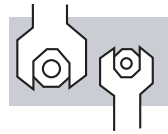

• Appropriate Tools

Always use tools that are designed for the task at hand. Incorrect usage of tools may result in damage to the engine and or serious personal injury.

(4) GENUINE PARTS and MATERIALS

CAUTION




• Genuine Parts

Always use genuine YANMAR parts or YANMAR recommended parts and goods. Damage to the engine, shortened engine life and or personal injury may result.

(5) FASTENER TORQUE

WARNING

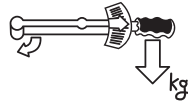


• Torquing Fasteners

Always follow the torque values and procedures as designated in the service manual. Incorrect values, procedures and or tools may cause damage to the engine and or personal injury.

(6) Electrical

WARNING

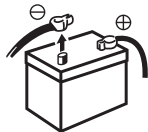

• Short Circuits

Always disconnect the (-) Negative battery cable before working on the electrical system. An accidental "short circuit" may cause damage, fire and or personal injury. Remember to connect the (-) Negative battery cable (back onto the battery) LAST

WARNING



• Charging Batteries

Charging wet celled batteries produces hydrogen gas. Hydrogen gas is extremely explosive. Keep sparks, open flame and any other form of ignition away. Explosion may occur causing severe personal injury.

WARNING



• Battery Electrolyte

Batteries contain sulfuric acid. Do NOT allow it to come in contact with clothing, skin and or eyes, severe burns will result.

(7) WASTE MANAGEMENT

CAUTION

Observe the following instructions with regard to hazardous waste disposal. Negligence of these will have a serious impact on environmental pollution concerns.

- 1) Waste fluids such as lube oil, fuel and coolant shall be carefully put into separate sealed containers and disposed of properly.
- 2) Do NOT dispose of waste materials irresponsibly by dumping them into the sewer, overland or into natural waterways.
- 3) Waste materials such as oil, fuel, coolant, solvents, filter elements and batteries, must be disposed of properly according to local ordinances. Consult the local authorities or reclamation facility.

(8) FURTHER PRECAUTIONS

WARNING



• Fueling / Refueling

Keep sparks, open flames or any other form of ignition (match, cigarette, etc.) away when fueling/refueling the unit. Fire and or an explosion may result.

CAUTION



• Hot Surfaces.

Do NOT touch the engine (or any of its components) during running or shortly after shutting it down. Scalding / serious burns may result. Allow the engine to cool down before attempting to approach the unit.

WARNING



• Rotating Parts

Be careful around moving/rotating parts. Loose clothing, jewelry, ties or tools may become entangled causing damage to the engine and or severe personal injury.

DANGER



• Preventing burns from scalding

- 1) Never open the filler cap shortly after shutting the engine down. Steam and hot water will spurt out and seriously burn you. Allow the engine to cool down before attempt to open the filler cap.
- 2) Securely tighten the filler cap after checking the cooling water. Steam can spurt out during engine running, if tightening loose.

CAUTION

• Safety Label Check

Pay attention to the product safety label. A safety label (caution plate) is affixed on the product for calling special attention to safety. If it is missing or illegible, always affix a new one.

CAUTION




• Do not step on

Don't step on engine parts such as part cover, because there is the possibility of slipping and fall.

Warning Labels

To insure safe operation, warning device labels have been attached. Their location is shown below and they should always be visible. Please replace if damaged or lost.

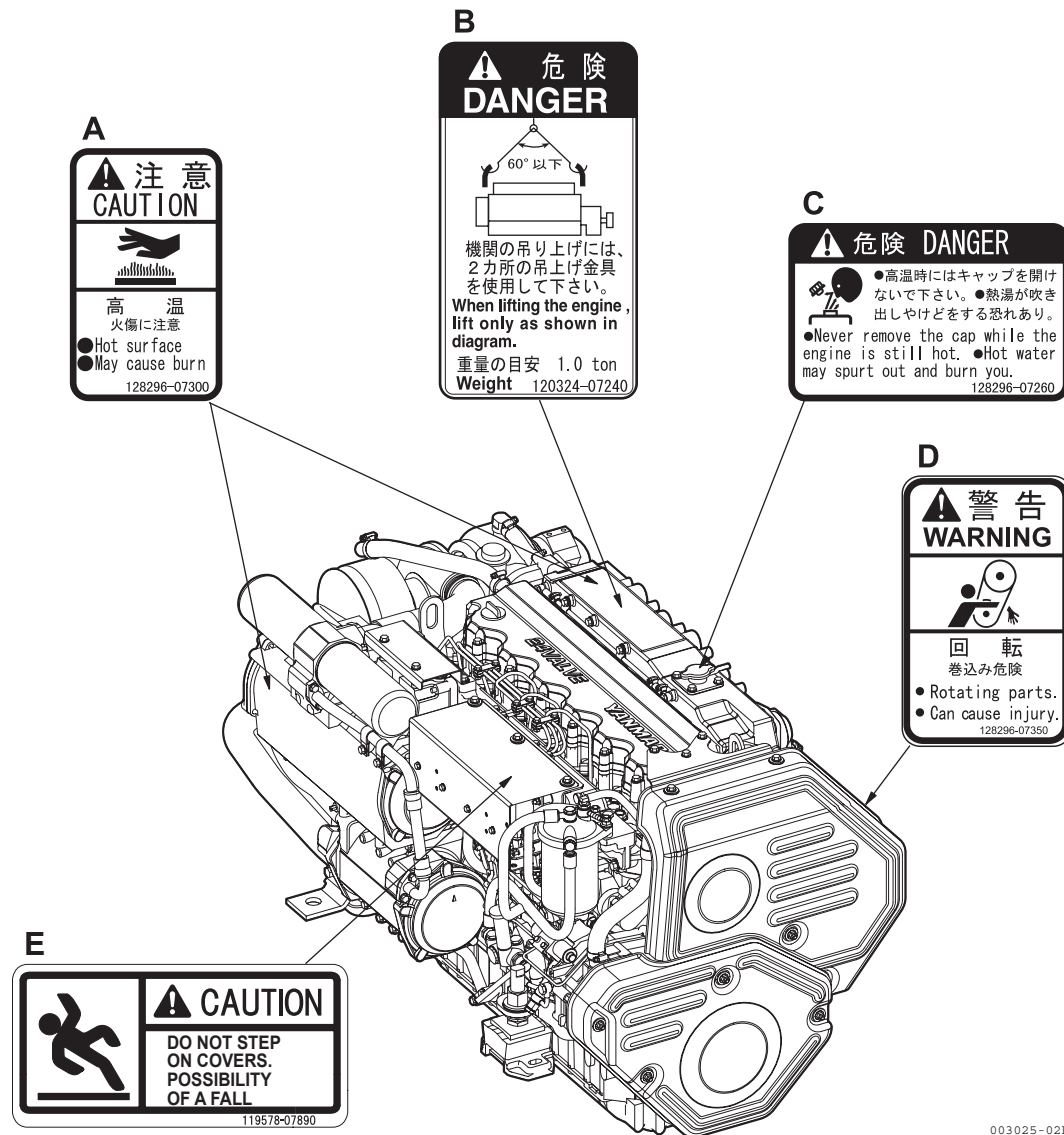

003025-02E

Warning Labels	
No.	Part Code No.
A	128296-07300
B	120324-07240
C	128296-07260
D	128296-07350
E	119578-07890

3. Precautions for Service Work

(1) Precautions for Safety

Read the safety precautions given at the beginning of this manual carefully and always mind safety in work.

(2) Preparation for Service Work

Preparation is necessary for accurate, efficient service work. Check the customer ledger file for the history of the engine.

- Preceding service date
- Period/operation hours after preceding service
- Problems and actions in preceding service
- Replacement parts expected to be required for service
- Recording form/check sheet required for service

(3) Preparation before Disassembly

- Prepare general tools, special service tools, measuring instruments, oil, grease, non-reusable parts, and parts expected to be required for replacement.
- When disassembling complicated portions, put match-marks and other marks at places not adversely affecting the function for easy reassembly.

(4) Precautions in Disassembly

- Each time a part is removed, check the part installed state, deformation, damage, roughening, surface defect, etc.
- Arrange the removed parts orderly with clear distinction between those to be replaced and those to be used again.
- Parts to be used again shall be washed and cleaned sufficiently.
- Select especially clean locations and use clean tools for disassembly of hydraulic units such as the fuel injection pump.

(5) Precautions for Inspection and Measurement

Inspect and measure parts to be used again as required to determine whether they are reusable or not.

(6) Precautions for Reassembly

- Reassemble correct parts in correct order according to the specified standards (tightening torques, and adjustment standards). Apply oil important bolts and nuts before tightening when specified.
- Always use genuine parts for replacement.
- Always use new oil seals, O-rings, packing and cotter pins.
- Apply sealant to packing depending on the place where they are used. Apply of grease to sliding contact portions, and apply grease to oil seal lips.

(7) Precautions for Adjustment and Check


Use measuring instruments for adjustment to the specified service standards.

1. General


1.1 Exterior views

6LY3-ETP

● Operation side

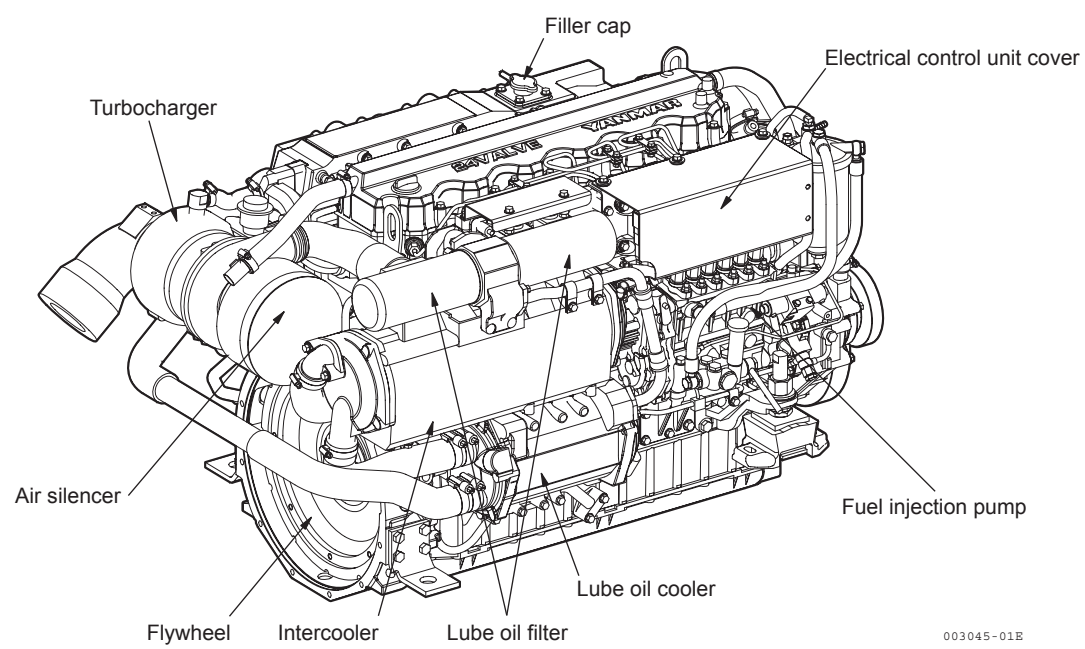

● Non operation side

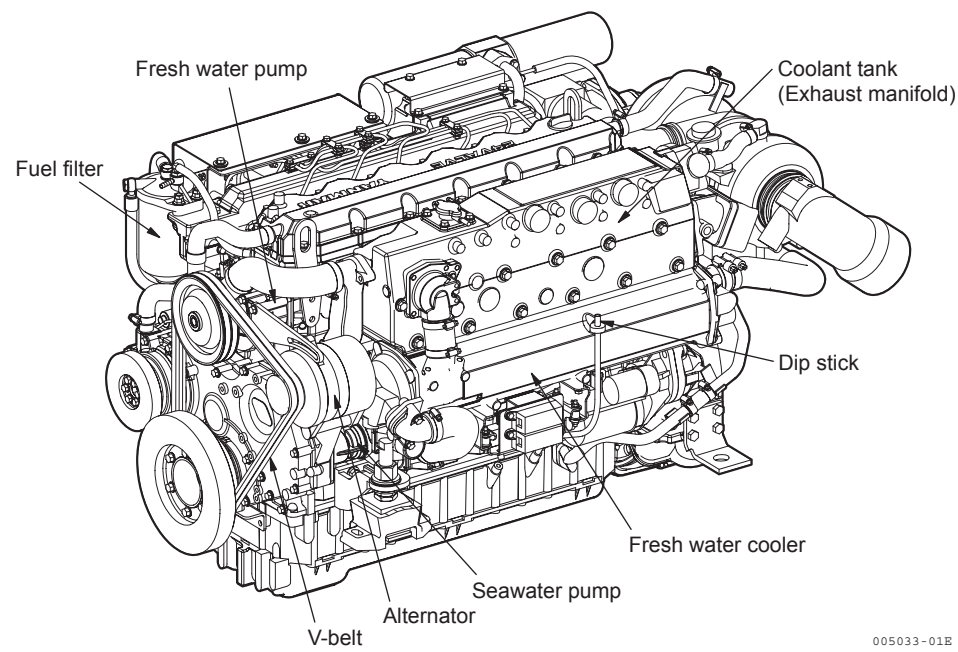

1. General

1.2 Main specifications

STP: 295kW(400hp)/3198min⁻¹, UTP: 254kW(345hp)/3198min⁻¹

Engine model		Unit	6LY3-ETP	6LY3-STP	6LY3-UTP
Marine gear model		-	-	-	-
Use		-	Pleasure use		
Type		-	Vertical water cooled 4 cycle diesel engine		
Combustion system		-	Direct injection		
Number of cylinders		-	6		
Bore x stroke		mm (inch)	105.9 x 110 (4.17 x 4.33)		
Displacement		ℓ	5.813		
Continuous power (Note 1)	Output at crankshaft / Engine speed	kW (HP) /min ⁻¹	321 (436)/3198	295 (400)/3198	254 (345)/3198
Fuel stop power (Note 1)	Output at crankshaft/ Engine speed	kW (HP) /min ⁻¹	353(480)/3300 (at Fuel inlet temp. 40 °C)	324(440)/3300 (at Fuel inlet temp. 40 °C)	279(380)/3300 (at Fuel inlet temp. 40 °C)
High idling		min ⁻¹	3500±25		
Low idling		min ⁻¹	700±25		
Installation		-	Flexible mounting		
Direction of rotation	Crankshaft	-	Counterclockwise viewed from stern		
Cooling system		-	Fresh water cooling with heat exchanger		
Lubrication system		-	Complete enclosed forced lubrication		
Coolant capacity (fresh)		ℓ (quart)	Engine: 28 (30) Coolant recovery tank: 1.5 (1.6)		
Lubricating oil capacity (engine)	Rake angle	deg.	rake angle 0 deg		
	Total (Note 4)	ℓ (quart)	18.8 (19.9)		
	Effective (Note 5)		8.0 (8.5)		
Starting system	Type	-	Electric		
	Starting motor	V-kW	DC 12V - 3 kW		
	AC generator	V-A	12V - 80A		
Turbocharger	Model	-	RHC7W (IHI made)		
	Type	-	Water cooled		
Engine Dimension	Overall length	mm (inch)	1300.4 (51.2)		
	Overall width		801.3 (31.5)		
	Overall height		776.6 (30.6)		
Engine dry mass (without marine gear)		kg	640		
Recommended battery capacity		-	12V-150AH		

(Note)

- Rating condition:
Temperature of fuel; 40°C at FO pump inlet; ISO 8665
- 1HP (metric horse power) ≅ 0.7355 kW
- Fuel condition: Density at 15°C = 0.860 g/cm³
- The "Total" oil quantity includes oil in oil pan, channels, coolers and filter.
- The effective amount of oil shows the difference in maximum scale of the dipstick and minimum scale.

1.3 Fuel oil, lubricating oil and cooling water

1.3.1 Fuel oil

IMPORTANT:

Only use the recommended fuel to obtain the best engine performance and to keep the durability of the engine, also to comply with the emission regulations.

(1) Selection of fuel oil

Diesel fuel oil should comply with the following specifications.

- The fuel specifications need to comply with each national standard or international standards.
- ASTM D975 No.1-D
No.2-D for USA
- EN590: 96 for EU
- ISO 8217 DMX International
- BS 2869-A1 or A2 for UK
- JIS K2204-2 for JAPAN

The following requirements also need to be fulfilled.

- Cetane number should be equal to 45 or higher.
- Sulfur content of the fuel.
It should not exceed 0.5% by volume.
(Preferably it should be below 0.05%).
- Water and sediment in the fuel oil should not exceed 0.05% by volume.
- Ash should not exceed 0.01% by mass.
- 10% Carbon residue content of the fuel.
It should not exceed 0.35% by volume.
(Preferably it should be below 0.1%).
- Aromatics (total) content of the fuel.
It should not exceed 35% by volume.
(Preferably it should be below 30% and aromatics (PAH*) content of the fuel preferably it should be below 10%)
PAH*: polycyclic aromatic hydrocarbons.
- DO NOT use Biocide.
- DO NOT use Kerosene, residual fuels.
- DO NOT mix winter fuel and summer fuel.

Note:

Engine breakdown can be attributed to insufficient quality of fuel oil.

