



# Service Manual Outline

## Section 1 - Important Information

- A - General Information
- B - Maintenance
- C - Troubleshooting

## Section 2 - Removal and Installation

- A - MCM 377 Bravo

## Section 3 - Engine

- A - 377 cid / 6.2L Engine

## Section 4 - Electrical Systems

- A - Starting System
- B - Ignition System
- C - Charging System
- D - Instrumentation
- E - Wiring Diagrams

## Section 5 - Fuel Systems

- A - Fuel Injection System Description/Operation
- B - Fuel Injection Delivery System
- C - Fuel Injection Disassembly And Reassembly
- D - Fuel Injection System Troubleshooting
- E - Diagnostics

## Section 6 - Cooling System

- A - Seawater Cooling System

## Section 7 - Exhaust System

- A - General
- B - Manifolds, Elbows and Risers
- C - Collectors

## Section 8 - Power Steering System

- A - Pump and Related Components

Important Information

1

Removal and Installation

2

Engine

3

Electrical Systems

4

Fuel Systems

5

Cooling System

6

Exhaust System


7

Power Steering System

8



## Notice

Throughout this publication, “Dangers”, “Warnings” and “Cautions” (accompanied by the International HAZARD Symbol ) are used to alert the mechanic to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. **OBSERVE THEM CAREFULLY!**

These “Safety Alerts” alone cannot eliminate the hazards that they signal. Strict compliance to these special instructions when performing the service, plus “Common Sense” operation, are major accident prevention measures.

### **DANGER**

**DANGER - Immediate hazards which WILL result in severe personal injury or death.**

### **WARNING**

**WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.**

### **CAUTION**

**Hazards or unsafe practices which could result in minor personal injury or product or property damage.**

## Notice to Users of This Manual

This service manual has been written and published by the Service Department of Mercury Marine to aid our dealers’ mechanics and company service personnel when servicing the products described herein.

It is assumed that these personnel are familiar with the servicing procedures of these products, or like or similar products manufactured and marketed by Mercury Marine, that they have been trained in the recommended servicing procedures of these products which includes the use of mechanics’ common hand tools and the special Mercury Marine or recommended tools from other suppliers.

We could not possibly know of and advise the service trade of all conceivable procedures by which a service might be performed and of the possible hazards and/or results of each method. We have not undertaken any such wide evaluation. Therefore, anyone who uses a service procedure and/or tool, which is not recommended by the manufacturer, first must completely satisfy himself that neither his nor the products safety will be endangered by the service procedure selected.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. As required, revisions to this manual will be sent to all dealers contracted by us to sell and/or service these products.

It should be kept in mind, while working on the product, that the electrical system and ignition system are capable of violent and damaging short circuits or severe electrical shocks. When performing any work where electrical terminals could possibly be grounded or touched by the mechanic, the battery cables should be disconnected at the battery.

Any time the intake or exhaust openings are exposed during service they should be covered to protect against accidental entrance of foreign material which could enter the cylinders and cause extensive internal damage when the engine is started.



---

It is important to note, during any maintenance procedure replacement fasteners must have the same measurements and strength as those removed. Numbers on the heads of the metric bolts and on the surfaces of metric nuts indicate their strength. American bolts use radial lines for this purpose, while most American nuts do not have strength markings. Mismatched or incorrect fasteners can result in damage or malfunction, or possibly personal injury. Therefore, fasteners removed should be saved for reuse in the same locations whenever possible. Where the fasteners are not satisfactory for re-use, care should be taken to select a replacement that matches the original.

## **Cleanliness and Care of Product**

A marine power product is a combination of many machined, honed, polished and lapped surfaces with tolerances that are measured in the ten thousands of an inch/mm. When any product component is serviced, care and cleanliness are important. Throughout this manual, it should be understood that proper cleaning and protection of machined surfaces and friction areas is a part of the repair procedure. This is considered standard shop practice even if not specifically stated.

Whenever components are removed for service, they should be retained in order. At the time of installation, they should be installed in the same locations and with the same mating surfaces as when removed.

Personnel should not work on or under an engine that is suspended. Engines should be attached to work stands, or lowered to ground as soon as possible.

We reserve the right to make changes to this manual without prior notification.

Refer to dealer service bulletins for other pertinent information concerning the products described in this manual.



# Table of Contents

## IMPORTANT INFORMATION

### Section 1A - General Information

Table of Contents	1A-1	Propeller Information	1A-5
Introduction	1A-2	Water Testing New Engines	1A-6
How to Use This Manual	1A-2	Boat and Engine Performance	1A-6
Page Numbering	1A-2	Boat Bottom	1A-6
How to Read a Parts Manual	1A-3	Marine Fouling	1A-8
Directional References	1A-4	Weight Distribution	1A-9
Engine Rotation	1A-4	Water in Boat	1A-9
Engine Serial Number Locations	1A-5	Elevation and Climate	1A-9

### Section 1B - Maintenance

Table of Contents	1B-1	Changing Oil and Filter	1B-10
Tools	1B-2	Changing Water Separating Fuel Filter	1B-11
Lubricants / Sealants / Adhesives	1B-2	Power Steering System	1B-12
Fluid Capacities	1B-2	Checking Fluid Level	1B-12
Engine	1B-2	Engine Warm	1B-12
Sterndrives	1B-2	Engine Cold	1B-13
Power Steering Fluid	1B-2	Filling and Bleeding	1B-13
Maintenance Schedules	1B-3	Flushing Cooling System	1B-14
Maintenance Intervals	1B-3	Boat Out of Water	1B-14
Engine and Tune-Up Specifications	1B-5	Boat In Water	1B-15
20-Hour Break-In Period	1B-6	Lubrication	1B-16
After Break-in Period	1B-6	Throttle Cable	1B-16
End of First Season Checkup	1B-6	Shift Cable	1B-16
Specifications	1B-7	Engine Coupler/U-Joint Shaft Splines	1B-17
Fuel Recommendations	1B-7	Cleaning Flame Arrestor	1B-18
Vapor locking	1B-7	Serpentine Drive Belt	1B-19
Gasolines Containing Alcohol	1B-8	Replacing and/or Adjusting Tension	1B-19
Test For Alcohol Content In Gasoline	1B-8	Removal	1B-19
Procedure To Test For Alcohol	1B-9	Inspection	1B-20
Crankcase Oil	1B-9	Installation and Adjustment	1B-20
Overfilled Crankcase Oil	1B-9	Ignition Timing	1B-21
Checking Engine Oil Level / Filling	1B-10		



## Section 1C - Troubleshooting

Table of Contents	1C-1	Engine Noise	1C-14
Used Spark Plug Analysis	1C-2	Important Information	1C-14
Normal Condition	1C-2	Valve Cover Area	1C-14
Chipped Insulator	1C-2	Cylinder Area	1C-15
Wet Fouling (Oil Deposits)	1C-3	Camshaft Area	1C-15
Cold Fouling	1C-3	Crankshaft Area	1C-16
Overheating	1C-3	Miscellaneous	1C-17
High Speed Glazing	1C-4	Oil Pressure	1C-18
Scavenger Deposits	1C-4	Low Oil Pressure	1C-19
Pre-Ignition Damage	1C-4	High Oil Pressure	1C-19
Reversed Coil Polarity	1C-5	Excessive Oil Consumption	1C-20
Splashed Deposits	1C-5	Water In Engine	1C-21
Mechanical Damage	1C-5	Important Information	1C-21
Poor Boat Performance and/or		Water on Top of Pistons	1C-22
Poor Maneuverability	1C-6	Water in Crankcase Oil	1C-22
Improper Full Throttle Engine RPM	1C-7	Engine Overheats (Mechanical)	1C-23
RPM Too High	1C-7	Engine Overheats (Cooling System)	1C-24
RPM Too Low	1C-7	Insufficient Water Flow from Belt	
Important Information	1C-7	Driven Seawater Pickup Pump	1C-25
Fuel System Rich	1C-8	Power Steering	1C-26
Fuel System Lean	1C-8	Poor, Erratic, or No Assist	1C-26
Miscellaneous	1C-8	Noisy Pump	1C-27
Engine Will Not Crank Over	1C-9	Fluid Leaks	1C-27
Charging System Inoperative	1C-9	Troubleshooting Silent Choice	
Noisy Alternator	1C-10	Exhaust Silencer System	1C-28
Instrumentation Malfunction	1C-10	Compressor Will Not Run - Testing	
Radio Noise	1C-10	Mode Switch	1C-29
Poor Fuel Economy	1C-11	Compressor Will Not Run - Testing	
Engine Runs Poorly at Idle	1C-11	Air Pump	1C-29
Engine Runs Poorly At High RPM	1C-12	Air Pump Runs - System Inoperative	1C-29
Engine Acceleration Is Poor	1C-13		
Troubleshooting with Vacuum Gauge	1C-13		

## REMOVAL AND INSTALLATION

### Section 2A MCM 377 BRAVO

Table of Contents	2A-1	Exhaust Hose Connections	2A-8
Torque Specifications	2A-2	Water Hose Connections	2A-8
Tools	2A-2	Electrical Connections	2A-9
Lubricants / Sealants / Adhesives	2A-2	Fuel Supply Connections	2A-11
Preparation	2A-3	Throttle Cable Installation and	
Removal	2A-3	Adjustment	2A-12
Installation	2A-4	Power Steering Connections	2A-13
Alignment	2A-6		



# ENGINE

## Section 3A - 377 cid / 6.2L Engine

Table of Contents	3A-1	Crankcase Oil Dipstick Specifications	3A-36
Tightening Torques and Lubes	3A-3	Oil Pan	3A-37
Lubricants / Sealants / Adhesives	3A-4	Removal	3A-37
Tools	3A-5	Cleaning and Inspection	3A-37
Specifications	3A-6	Installation	3A-37
General Specifications	3A-6	Oil Pump	3A-39
Engine Specifications	3A-6	Exploded View	3A-39
General Information	3A-10	Removal	3A-40
Repair Procedures	3A-10	Disassembly	3A-40
Engine Identification	3A-10	Cleaning and Inspection	3A-40
Engine Rotation	3A-11	Reassembly	3A-41
Description	3A-11	Installation	3A-41
Crankshaft	3A-11	Torsional Damper	3A-42
Piston and Connecting Rods	3A-11	Removal	3A-42
Camshaft and Drive	3A-11	Installation	3A-42
Cylinder Head	3A-12	Crankcase Front Cover/Oil Seal	3A-44
Valve Train	3A-12	Removal	3A-44
Intake Manifold	3A-12	Installation	3A-44
Lubrication System	3A-12	Flywheel	3A-45
Bearing Failures	3A-14	Removal	3A-45
Piston Failures	3A-15	Cleaning and Inspection	3A-45
Pre-Ignition	3A-15	Installation	3A-46
Detonation	3A-16	Rear Main Oil Seal	3A-47
Engine Mounts	3A-17	Removal	3A-47
Rocker Arm Cover	3A-18	Cleaning and Inspection	3A-47
Removal	3A-18	Installation	3A-47
Installation	3A-18	Rear Main Oil Seal Retainer	3A-48
Intake Manifold	3A-19	Removal	3A-48
Removal	3A-19	Cleaning and Inspection	3A-49
Cleaning and Inspection	3A-19	Installation	3A-49
Installation	3A-20	Main Bearings	3A-49
Rocker Arm / Push Rod	3A-21	Inspection	3A-49
Removal	3A-21	Checking Clearances	3A-50
Cleaning and Inspection	3A-21	Replacement	3A-52
Installation	3A-21	Connecting Rod Bearings	3A-54
Valve Adjustment	3A-22	Inspection and Replacement	3A-54
Hydraulic Valve Lifters	3A-23	Connecting Rod / Piston Assembly	3A-56
Locating Noisy Lifters	3A-23	Removal	3A-56
Removal	3A-24	Disassembly	3A-57
Cleaning and Inspection	3A-25	Cleaning and Inspection	3A-57
Installation	3A-25	Reassembly	3A-59
Valve Stem Oil Seal / Valve Spring	3A-26	Installation	3A-61
Removal - Head Installed	3A-26	Crankshaft	3A-63
Valve Assembly (Exploded View)	3A-27	Removal	3A-63
Installation - Head Installed	3A-27	Cleaning and Inspection	3A-65
Cylinder Head	3A-28	Installation	3A-66
Removal	3A-28	Timing Chain and Sprocket	3A-67
Cleaning and Inspection	3A-28	Removal	3A-67
Installation	3A-28	Cleaning and Inspection	3A-68
Cylinder Head and Valve Conditioning	3A-30	Crankshaft Sprocket/Gear	3A-68
Disassembly	3A-30	Removal	3A-68
Valve Springs - Checking Tension	3A-32	Installation	3A-68
Rocker Arm Stud Replacement	3A-33	Checking Timing Chain Deflection	3A-68
Valve Seat Repair	3A-33		
Valve Grinding	3A-34		
Reassembly	3A-35		



# ENGINE (CONTINUED)

## Section 3A - 377 cid / 6.2L Engine

Camshaft	3A-69	Cylinder Conditioning	3A-74
Measuring Lobe Lift	3A-69	Cylinder Boring	3A-74
Removal	3A-70	Cylinder Honing	3A-75
Camshaft Bearings	3A-71	Piston Selection	3A-75
Removal	3A-71	Oil Filter By-Pass Valve and	
Cleaning and Inspection	3A-72	Adaptor Assembly	3A-77
Installation	3A-72	Removal	3A-78
Cylinder Block	3A-73	Cleaning and Inspection	3A-78
Cleaning and Inspection	3A-73	Installation	3A-78

# ELECTRICAL SYSTEMS

## Section 4A - Starting System

Table of Contents	4A-1	Testing	4A-10
Identification	4A-2	Starter Motor Voltage	4A-10
Delco PG260F1 Permanent Magnet		Voltage Drop In Starting System	4A-11
Gear Reduction Starter	4A-2	Delco PG260F1 Starter	4A-12
Replacement Parts Warning	4A-2	Specifications	4A-12
General Precautions	4A-2	Starter Specifications	4A-12
Typical Starting System Components	4A-3	Torque Specifications	4A-12
Positive Current Flow	4A-4	Lubricants / Sealants / Adhesives	4A-12
Battery	4A-4	Description	4A-12
Battery Cable Recommendations	4A-4	Exploded View	4A-13
Maintenance	4A-6	Motor	4A-14
Testing	4A-7	Removal	4A-14
Storage	4A-7	Disassembly	4A-14
Charging Guide	4A-8	Cleaning and Inspection	4A-18
How Temperature Affects		Reassembly	4A-18
Battery Power	4A-9	Checking Pinion Clearance	4A-22
Standard Starter Slave Solenoid	4A-9	Installation	4A-23
Identification	4A-9		
Testing / Replacement	4A-10		

## Section 4B - Ignition System

Table of Contents	4B-1	Spark Plugs	4B-5
Ignition Control System Components	4B-2	Removal	4B-5
Replacement Parts Warning	4B-2	Inspection	4B-5
General Precautions	4B-2	Replacing	4B-6
EFI System Maintenance Precautions	4B-3	Spark Plug Wires	4B-6
Torque Specifications	4B-3	Inspection	4B-6
Tools	4B-3	Replacing	4B-6
Lubricants / Sealants / Adhesives	4B-3	GM EST Distributor	4B-8
Ignition System Specifications	4B-4	Removal	4B-8
Distributor	4B-4	Disassembly	4B-8
Coil	4B-4	Cleaning and Inspection	4B-9
Spark Plugs	4B-4	Testing Pickup Coil	4B-10
Firing Order	4B-4	Reassembly	4B-10
Timing	4B-5	Installation	4B-11



# ELECTRICAL SYSTEMS (CONTINUED)

## Section 4C - Charging System

Table of Contents	4C-1	Alternator Repair	4C-7
General Precautions	4C-2	Removal	4C-7
Electrical System Precautions	4C-2	Testing	4C-7
Replacement Parts Warning	4C-2	Charging System	4C-7
Multiple Engine Battery Precautions	4C-3	Charging System Resistance	4C-8
Recommendations	4C-3	Circuitry	4C-10
Identification	4C-4	Disassembly	4C-11
Mando 65 Amp Alternator	4C-4	Cleaning and Inspection	4C-15
Specifications	4C-4	Reassembly	4C-20
Tools	4C-4	Pulley Installation	4C-24
Lubricants / Sealants / Adhesives	4C-4	Installation	4C-24
Exploded View	4C-5	Battery Isolator Diagram	4C-25
Torque Specifications	4C-6		
Description	4C-6		

## Section 4D - Instrumentation

Table of Contents	4D-1	Senders	4D-9
Tools	4D-2	Oil Pressure	4D-9
Lubricants / Sealants / Adhesives	4D-2	Engine Coolant Temperature	
Identification	4D-2	Sender (ECT)	4D-10
Description	4D-3	Switches	4D-12
Lighting Options	4D-3	Ignition Key Switch	4D-12
Gauges	4D-4	Lanyard Stop Switches	4D-13
Circuits	4D-4	Start/Stop Switch	4D-14
Oil, Fuel and Temperature	4D-4	Audio Warning System	4D-14
Battery Gauge	4D-6	Buzzer	4D-14
Cruiselog Meter	4D-7	Oil Pressure Switch	4D-15
Vacuum Gauge	4D-7	Sterndrive Gear Lube	
Speedometer	4D-8	Monitor Switch	4D-15
Tachometer	4D-8		
Gauge Replacement	4D-8		

## Section 4E - Wiring Diagrams

Table of Contents	4E-1
Wiring Diagrams	4E-2
EFI and Ignition System	4E-2
Starting and Charging System	4E-3





# FUEL SYSTEM

## Section 5A - Fuel Injection System Description/Operation

Table of Contents	5A-1	Electronic Control Module (ECM) and Sensors	5A-12
Special Tools	5A-2	General Description	5A-12
Service Precautions	5A-3	Computers and Voltage Signals	5A-12
General Information	5A-5	Analog Signals	5A-12
Electrostatic Discharge Damage	5A-5	Digital Signals	5A-13
Diagnostic Information	5A-5	Engine Control Module (ECM)	5A-14
Wiring Harness Service	5A-5	Speed Density System	5A-15
Wiring Connector Service	5A-6	ECM Input and Sensor Descriptions	5A-16
Abbreviations	5A-7	Spark Management	5A-19
ECM Self-Diagnostics	5A-8	High Energy Ignition with Ignition Control (IC)	5A-19
Diagnostic Code Tool With Malfunction Indicator Lamp	5A-8	Modes Of Operation	5A-20
Intermittent Malfunction Indicator Lamp	5A-8	Base Ignition Timing	5A-21
Reading Codes	5A-9	Results of Incorrect Operation	5A-22
Scan Tools	5A-10	Fuel Metering System	5A-23
EFI Diagnostic Circuit Check	5A-10	General Description	5A-24
Scan Tool Use With Intermittents	5A-10	Cool Fuel Systems	5A-24
Non-Scan Diagnosis of Driveability Concerns (With No Codes Set)	5A-11	Modes of Operation	5A-24

## Section 5B - Fuel Injection Delivery System

Table of Contents	5B-1	Fuel System Flow Diagram	5B-6
Specifications	5B-2	Water Separating Fuel Filter	5B-9
Torque Specifications	5B-2	Water Separating Fuel Filter Replacement	5B-10
Tools	5B-2	Cool Fuel System Repair	5B-10
Lubricants / Sealants / Adhesives	5B-2	Removal	5B-10
Replacement Parts Warning	5B-2	Disassembly	5B-11
Precautions	5B-3	Reassembly	5B-12
Fuel Supply Connections	5B-3	Installation	5B-14
Fuel Delivery System	5B-4	Vacuum And Vent Hose Routing	5B-17
Recommendations	5B-4		
Cool Fuel System Exploded View	5B-5		

## Section 5C - Fuel Injection Disassembly And Reassembly

Table of Contents	5C-1	Fuel Rails	5C-13
Service Precautions	5C-2	Fuel Injectors	5C-15
Torque Specifications	5C-3	Manifold Absolute Pressure Sensor (MAP)	5C-16
Exploded Views	5C-4	Throttle Position Sensor (TP)	5C-17
Plenum, Throttle Body and Flame Arrestor	5C-4	Idle Air Control Valve (IAC)	5C-18
Intake Manifold And Fuel Rails	5C-5	Knock Sensor	5C-20
Fuel Pressure Relief Procedure	5C-6	Fuel Pump Relay	5C-21
Throttle Body Components	5C-6	System Relay	5C-21
Flame Arrestor	5C-6	Engine Control Module (ECM)	5C-22
Throttle Body	5C-7	Engine Coolant Temperature Sensor (ECT)	5C-23
Plenum	5C-11		



# FUEL SYSTEM (CONTINUED)

## Section 5D - Fuel Injection System Troubleshooting

Table of Contents	5D-1	Detonation / Spark Knock Symptom	5D-11
Scan Tool Normal Specifications (Idle / Warm Engine / Closed Throttle / Neutral)	5D-2	Hesitation, Sag, Stumble Symptom	5D-13
Important Preliminary Checks	5D-3	Cuts Out, Misses Symptom	5D-15
Before Starting	5D-3	Rough, Unstable, or Incorrect Idle, Stalling Symptom	5D-17
Visual / Physical Check	5D-3	Poor Fuel Economy Symptom	5D-20
Intermittents	5D-4	Dieseling, Run-On Symptom	5D-22
Hard Start Symptom	5D-5	Backfire Symptom	5D-23
Surges and/or Chuggles Symptom	5D-7		
Lack of Power, Sluggish or Spongy Symptom	5D-9		

## Section 5E - Diagnostics

Table of Contents	5E-1	Chart A-6 EFI System/Ignition Relay Check	5E-26
Special Tools	5E-2	Chart A-7 Ignition System Check	5E-28
Diagnostic Circuit Check	5E-3	Chart A-8 Idle Air Control (IAC) Functional Test	5E-33
Scan Tool Normal Specifications	5E-3	Discrete Input Circuit Check - Non-Scan Only	5E-35
Diagnostic Trouble Codes	5E-4	Clearing Trouble Codes	5E-39
ECM Connector and EFI Symptoms Charts	5E-4	Clearing Codes Using Code Mate Tester	5E-39
J-1 Circuits	5E-5	Clearing Codes Using Scan Tool	5E-39
J-2 Circuits	5E-7	Diagnostic Testing	5E-40
Wiring System Diagrams	5E-9	Code 14 Engine Coolant Temperature (ECT) Sensor Circuit	5E-40
Wiring System Diagram With GM EST Distributor	5E-11	Code 15 Engine Coolant Temperature (ECT) Sensor Circuit	5E-43
Injector Balance Test (Multi-Port Models)	5E-12	Code 21 Throttle Position (TP) Sensor Circuit	5E-45
Test Procedure	5E-12	Code 22 Throttle Position (TP) Sensor Circuit	5E-48
Test Example	5E-13	Code 33 Manifold Absolute Pressure (MAP) Sensor Circuit	5E-51
General Diagnostic Tests	5E-14	Code 34 Manifold Absolute Pressure (MAP) Sensor Circuit	5E-54
On-Board Diagnostic (OBD) System Check	5E-14	Code 41 Ignition Control (IC) Circuit	5E-57
Chart A-1 No Malfunction Indicator Light (MIL) or No Data Link Connector (DLC) Data	5E-16	Code 42 Ignition Control (IC) Circuit	5E-59
Chart A-2 MIL ON Steady - Will Not Flash DTC 12	5E-18	Code 51 Calibration Memory Failure	5E-61
Chart A-3 Engine Cranks But Will Not Run	5E-20		
Chart A-4 Fuel System Diagnosis	5E-22		
Chart A-5 Fuel System Electrical Test	5E-24		



# COOLING SYSTEM

## Section 6A - Seawater Cooling System

Table of Contents	6A-1	Seawater Pickup Pump	6A-10
Torque Specifications	6A-2	Output Test	6A-10
Tools	6A-2	Disassembly	6A-11
Lubricants / Sealants / Adhesives	6A-3	Reassembly	6A-11
Specifications	6A-3	Seawater Pump Bearing Housing	6A-12
Cooling System Capacity	6A-3	Disassembly	6A-12
Thermostat	6A-3	Cleaning and Inspection	6A-14
Seawater Inlet Recommendations	6A-3	Reassembly	6A-14
Transom Mounted or Thru-Hull Seawater		Water Circulating Pump	6A-17
Pickups and Hose	6A-3	Removal	6A-17
Seacock (Seawater Inlet Valve)	6A-4	Cleaning and Inspection	6A-17
Sea Strainer	6A-4	Installation	6A-17
Seawater Pickups	6A-5	Drive Belt Tension Adjustment	6A-18
Thru-Hull Mounted	6A-5	Flushing Seawater Cooling System	6A-18
Transom Mounted	6A-6	Thermostat	6A-18
Quicksilver Sea Strainer	6A-7	Removal	6A-18
Removal	6A-7	Testing	6A-19
Cleaning and Inspection	6A-8	Installation	6A-20
Installation	6A-8	Water Flow Diagram	6A-21

# EXHAUST SYSTEM

## Section 7A - General

Table of Contents	7A-1	Exhaust Hose Connection	7A-3
Exhaust System Requirements	7A-2	Exhaust Tube Requirements	7A-4
Exhaust Elbow Risers	7A-2		
Thru-Transom Exhaust	7A-3		

## Section 7B - Manifolds, Elbows And Risers

Table of Contents	7B-1	Cleaning and Inspection	7B-3
Torque Specifications	7B-2	Installation	7B-5
Lubricants / Sealants / Adhesives	7B-2	Sterndrive Exhaust Extension	7B-6
Disassembly	7B-2		

## Section 7C - Collectors

Table of Contents	7C-1	Silent Choice Exhaust System	7C-7
Torque Specifications	7C-2	Exhaust Tube Installation	7C-7
Lubricants / Sealants / Adhesives	7C-2	Air Tube Routing	7C-9
Bullhorn Exhaust	7C-3	Maintenance	7C-10
Component Replacement	7C-3	Exhaust Muffler Kit	7C-11
Shutter Replacement	7C-3	Cleaning and Inspection	7C-12
Thru-Transom Exhaust	7C-4	Installation	7C-12
Shutter Replacement	7C-4	Maintenance	7C-13
Component Replacement	7C-5		
Below Swim Platform Exhaust Pipe	7C-6		



# POWER STEERING SYSTEM

## Section 8A - Pump And Related Components

---

Table of Contents .....	8A-1	Pump Assembly .....	8A-7
Torque Specifications .....	8A-2	Removal .....	8A-7
Tools .....	8A-2	Installation .....	8A-9
Lubricants / Sealants / Adhesives .....	8A-2	Hydraulic Hoses and Fluid Cooler .....	8A-10
Precautions .....	8A-2	High Pressure Hose (Pump to	
Serpentine Belt Routing .....	8A-3	Control Valve) .....	8A-10
Serpentine Belt Adjustment .....	8A-3	Low Pressure Hose	
Removal .....	8A-3	(Cooler to Pump) .....	8A-12
Installation .....	8A-4	Low Pressure Hose	
Power Steering Pump and Components	8A-5	(Control Valve to Cooler) .....	8A-14
Power Steering Pump .....	8A-6		
Pump Pulley Replacement .....	8A-6		

---



# IMPORTANT INFORMATION

## Section 1A - General Information

**1  
A**

### Table of Contents

---

Introduction .....	1A-2	Propeller Information .....	1A-5
How to Use This Manual .....	1A-2	Water Testing New Engines .....	1A-6
Page Numbering .....	1A-2	Boat and Engine Performance .....	1A-6
How to Read a Parts Manual .....	1A-3	Boat Bottom .....	1A-6
Directional References .....	1A-4	Marine Fouling .....	1A-8
Engine Rotation .....	1A-4	Weight Distribution .....	1A-9
Engine Serial Number Locations .....	1A-5	Water in Boat .....	1A-9
		Elevation and Climate .....	1A-9

---



# Introduction

This comprehensive overhaul and repair manual is designed as a service guide for the models previously listed. It provides specific information, including procedures for disassembly, inspection, assembly and adjustment to enable dealers and service mechanics to repair and tune these engines.

Before attempting repairs or tune-up, it is suggested that the procedure first be read through to gain knowledge of the methods and tools used and the cautions and warnings required for safety.

## How to Use This Manual


This manual is divided into sections which represent major components and systems.

Some sections are further divided into parts which more fully describe the component.

Sections and section parts are listed on the "Service Manual Outline" page following "V-8 Models Covered in This Manual" page.

## Page Numbering

Two number groups appear at the bottom of each page. Following is an example and description.

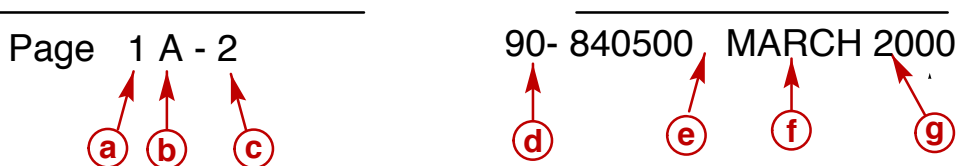


- a** - Section Number
- b** - Section Part
- c** - Page Number
- d** - Manual Part Number
- e** - Revision Number
- f** - Month Printed
- g** - Year Printed



# How to Read a Parts Manual

## Power Steering Pump Assembly

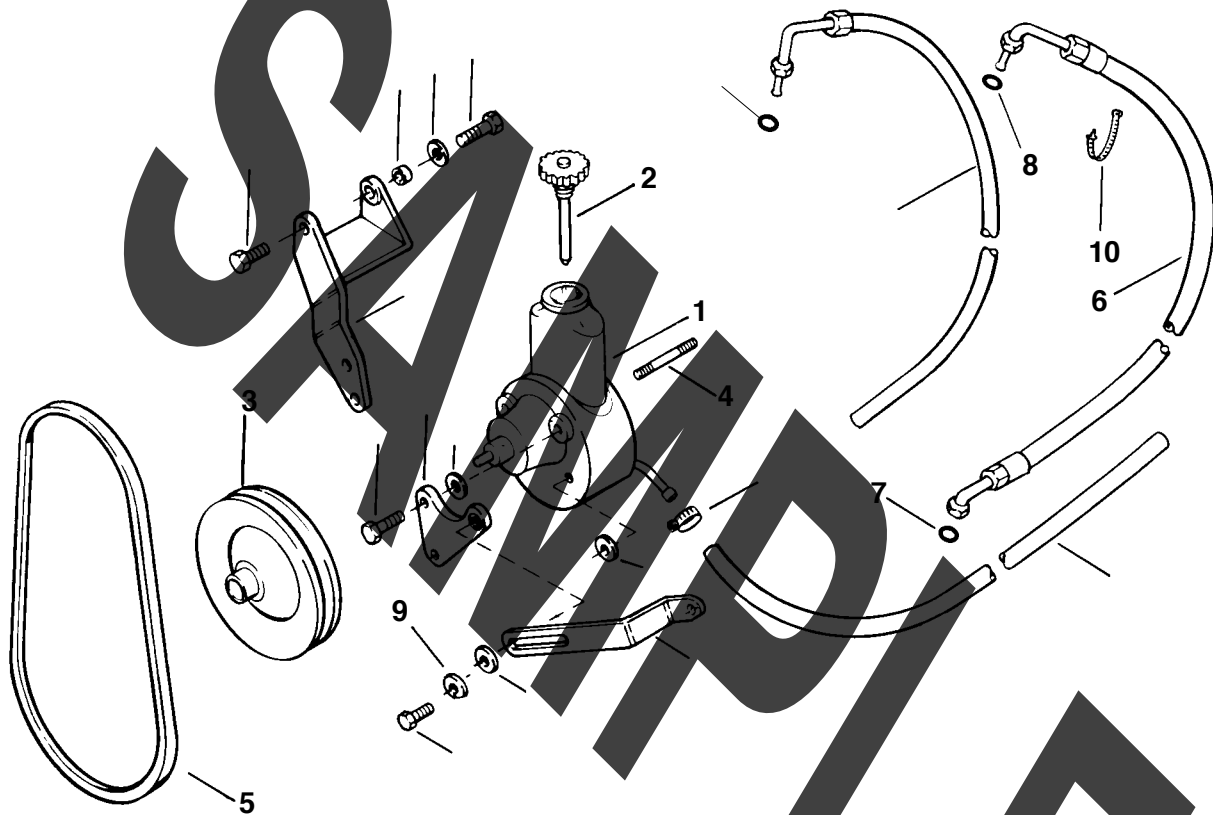

REF. NO.	PART NO.	SYM.	QTY.	DESCRIPTION
1	90507A12		1	PUMP ASSEMBLY—Power Steering
2	36- 95805		1	CAP
3	73873A1		1	PULLEY
4	16- 41877		1	STUD
5	57- 65607T		1	V-BELT
6	32- 806684		1	HOSE—Pressure (FITTINGS ON BOTH ENDS)
7	25- 89879		1	O-RING
8	25- 806232		1	O-RING
9	13- 35048		1	LOCKWASHER (3/8 in.)
10	61990		1	CABLE TIE

**REF. NO. :** Number shown next to part on exploded view

**PART NO. :** Mercury Part Number for ordering. If NSS (not sold separately) sometimes GM part number will be given in description column.


**QTY. :** The quantity that must be ordered.

**DESCRIPTION :** Description of part, what parts are included with a part (all indented items come with the main item above the indented parts), serial number information, and special information.



## Directional References


Front of boat is bow; rear is stern. Starboard side is right side; port side is left side. In this maintenance manual, all directional references are given as they appear when viewing boat from stern looking toward bow.

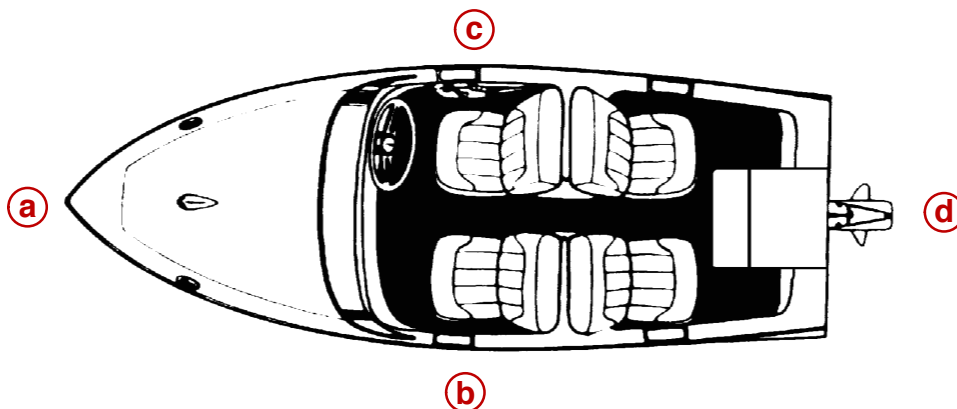

- a** - Bow (Front)
- b** - Port (Left)
- c** - Starboard (Right)
- d** - Stern (Rear)

## Engine Rotation

Engine rotation is determined by observing flywheel rotation from the rear (stern end) of the engine looking forward (toward water pump end). Propeller rotation is not necessarily the same as engine rotation. When ordering replacement engine, short blocks or parts for engine, be certain to check engine rotation. Do not rely on propeller rotation in determining engine rotation.

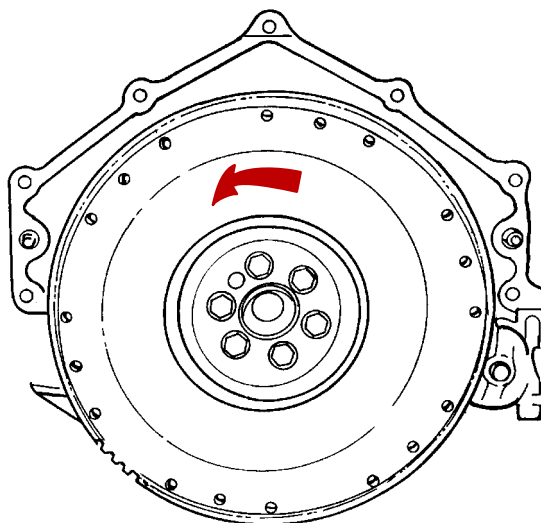

72001


**Standard Left Hand Rotation**





## Engine Serial Number Locations

Serial number decal for engine, drive and transom are located on the side of the intake plenum.

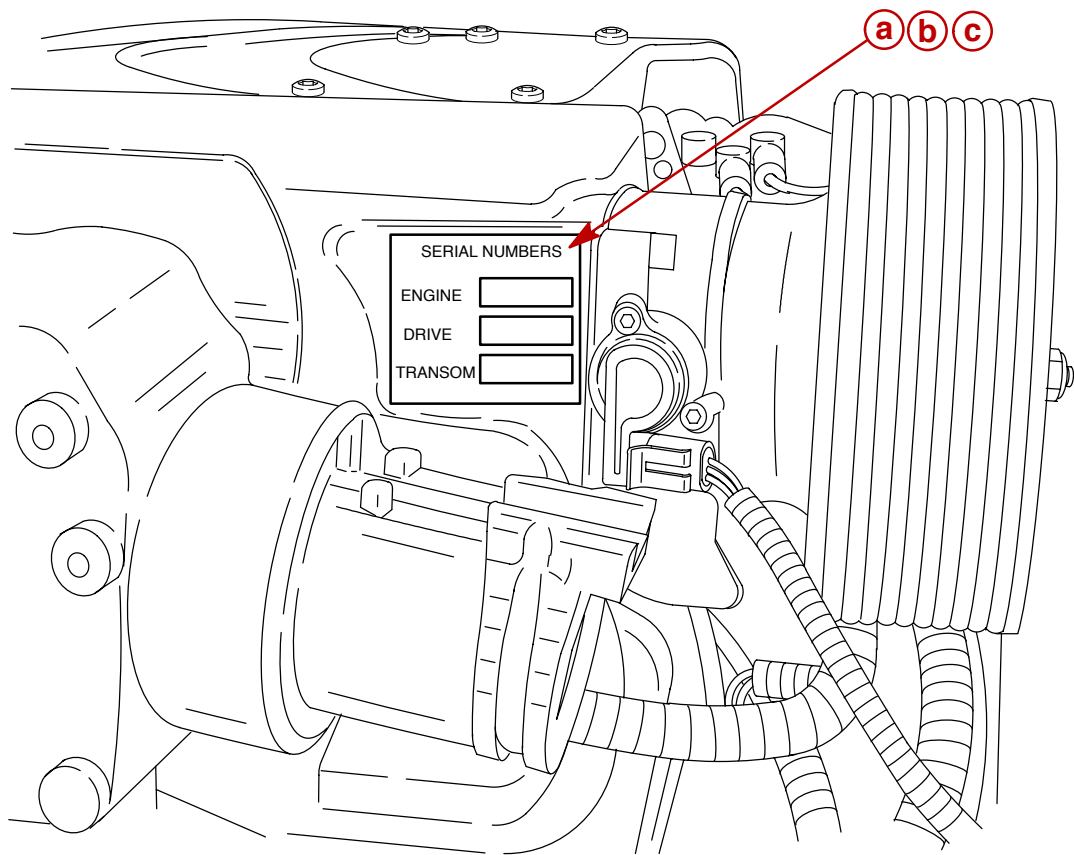

- a** - Engine Serial Number
- b** - Drive Serial Number
- c** - Transom Serial Number



## Propeller Information

Refer to the “Propeller” section in appropriate Mercury MerCruiser Sterndrive Service Manual, or order publication 90-86144-92, “Everything you need to know about propellers.”

Changing diameter, pitch or coupling of a propeller will affect engine rpm and boat performance. The blade configuration also will affect performance. Two like propellers, same pitch and diameter, from two different manufacturers will perform differently.

1. It is the responsibility of the boat manufacturer and/or selling dealer to equip the boat with the correct propeller to allow the engine to operate within its specified rpm range at wide-open-throttle (WOT).

Because of the many variables of boat design and operation, only testing will determine the best propeller for the particular application.

To test for correct propeller, operate boat (with an average load onboard) at WOT and check rpm with an accurate tachometer. Engine rpm should be near top of the specified range so that, under heavy load, engine speed will not fall below specifications.

If engine exceeds the specified rpm, an increase in pitch and/or diameter is required.

If engine is below rated rpm, a decrease in pitch and/or diameter is required.

Normally, a change of approximately 150 rpm will be achieved for each single inch of pitch change of a propeller.

### CAUTION

**If a propeller is installed that does not allow engine rpm to reach the specified full-throttle rpm range, the engine will “labor” and will not produce full power. Operation under this condition will cause excessive fuel consumption, engine overheating and possible piston damage (due to detonation). Conversely, installing a propeller, allowing engine to run above the specified rpm limit, will cause excessive wear on internal engine parts which will lead to premature engine failure.**

## Water Testing New Engines

Use care during the first 20 hours of operation on new Mercury MerCruiser engines or possible engine failure may occur. If a new engine has to be water-tested at full throttle before the break-in period is complete, follow this procedure.

1. Start engine and run at idle rpm until normal operating temperature is reached.
2. Run boat up on plane.
3. Advance engine rpm (in 200 rpm increments) until engine reaches its maximum rated rpm.


**IMPORTANT: Do not run at maximum rpm for more than 2 minutes.**



# Boat and Engine Performance

## Boat Bottom


For maximum speed, a boat bottom should be as flat as possible in a fore-aft direction (longitudinally) for approximately the last 5 ft (1.5 m). Any hook, rocker or surface roughness on the bottom, particularly in the critical center-aft portion will have a negative effect on speed, often several miles per hour on a fast boat.

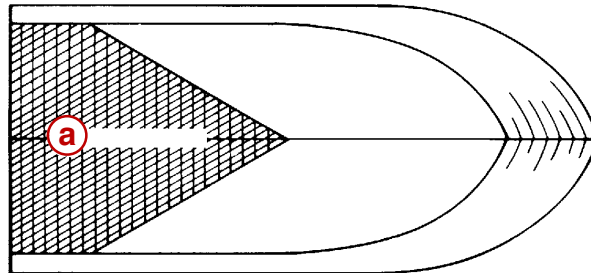

72002

**a** - Critical Bottom Area


For best speed and minimum spray, the corner between the bottom and the transom should be sharp.

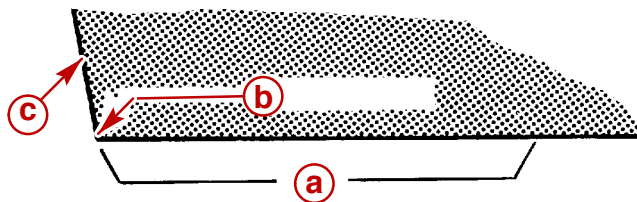

72003

**a** - Bottom  
**b** - Corner  
**c** - Transom


The bottom is referred to as having a “hook” if it is concave in the fore-and-aft direction. A hook causes more lift on the bottom near the transom and forces the bow to drop. This increases wetted surface and reduces boat speed. A hook, however, aids in planing and reduces any porpoising (rhythmical bouncing) tendency. A slight hook is often built in by the manufacturer. A hook also can be caused by incorrect trailering or storing the boat with support directly under the transom.

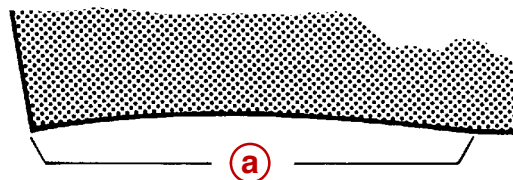

72004

**a** - Hook

A “rocker” is the reverse of a hook. The bottom is convex or bulged in the fore-and-aft direction. It can cause the boat to porpoise.

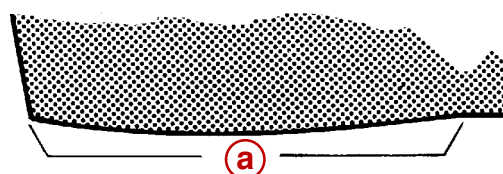

72005

**a** - Rocker



## Marine Fouling

Fouling is an unwanted build-up (usually animal-vegetable-derived) occurring on the boat's bottom and drive unit. Fouling adds up to drag, which reduces boat performance. In fresh water, fouling results from dirt, vegetable matter, algae or slime, chemicals, minerals and other pollutants. In salt water, barnacles, moss and other marine growth often produce dramatic build-up of material quickly. Therefore, it is important to keep the hull as clean as possible in all water conditions to maximize boat performance.

Antifouling paint, if required, may be applied to boat hull observing the following precautions.


**IMPORTANT: DO NOT** paint anodes or MerCathode System reference electrode and anode, as this will render them ineffective as galvanic corrosion inhibitors.

### ⚠ CAUTION

Avoid corrosion damage. Do not apply antifouling paint to Mercury MerCruiser drive unit or transom assembly.

**IMPORTANT:** If antifouling protection is required, Tri-Butyl-Tin-Adipate (TBTA) base antifouling paints are recommended on Mercury MerCruiser boating applications. In areas where Tri-Butyl-Tin-Adipate base paints are prohibited by law, copper base paints can be used on boat hull and boat transom. Corrosion damage that results from the improper application of antifouling paint will not be covered by the limited warranty. Observe the following:

Avoid an electrical interconnection between the Mercury MerCruiser Product, Anodic Blocks, or MerCathode System and the paint by allowing a minimum of 1 in. (26mm) UNPAINTED area on transom of the boat around these items.

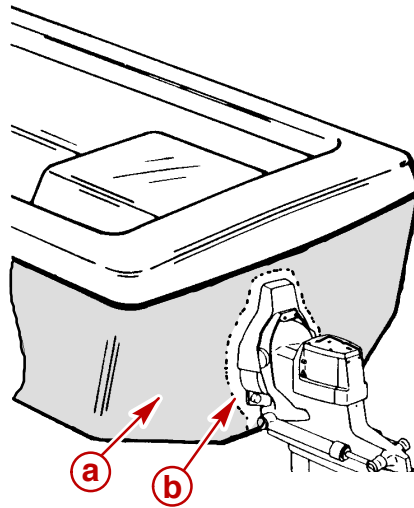

71176

- a** - Antifouling Paint
- b** - MINIMUM 1 inch (26 mm) Unpainted Area